
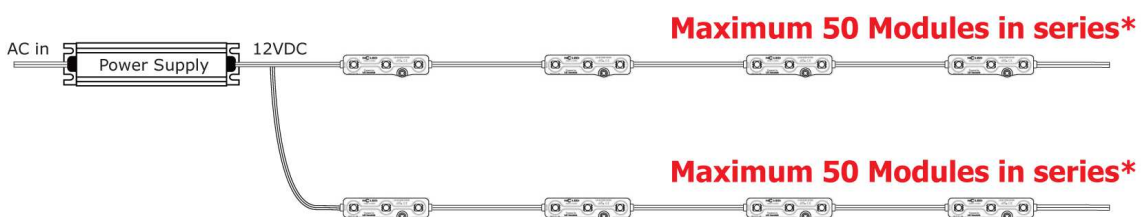
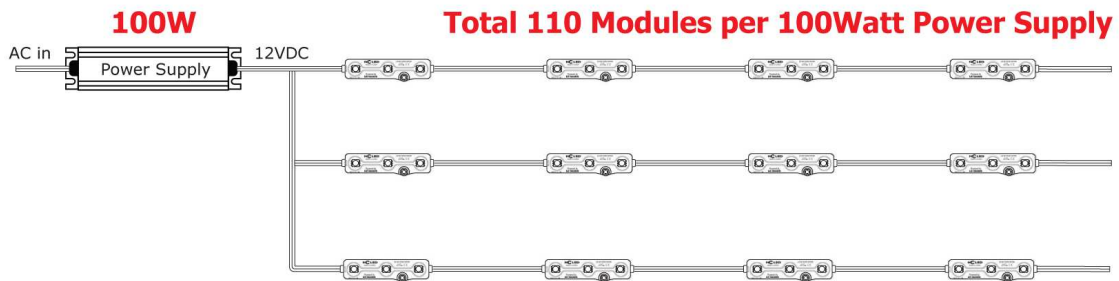
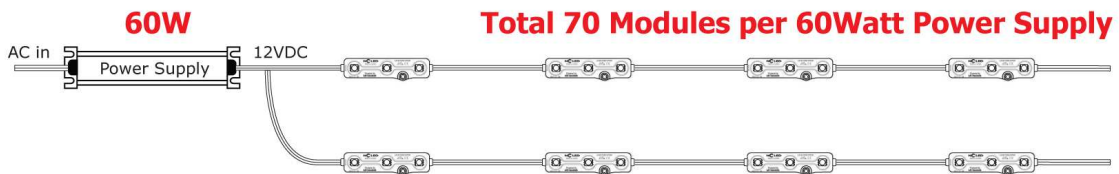
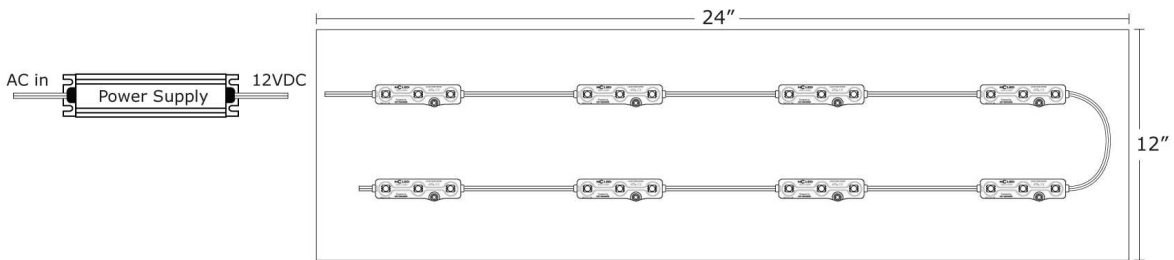
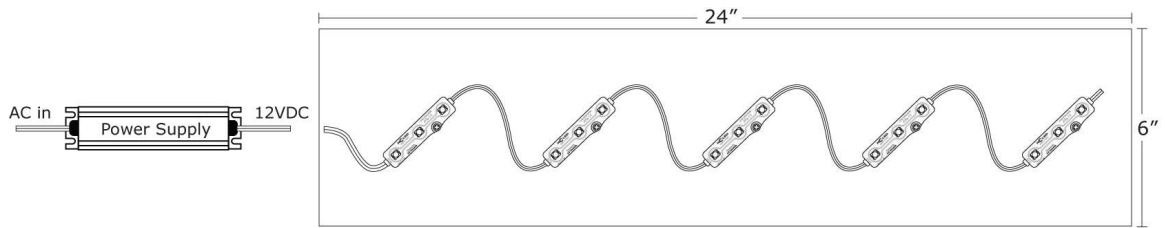


Installation Guide

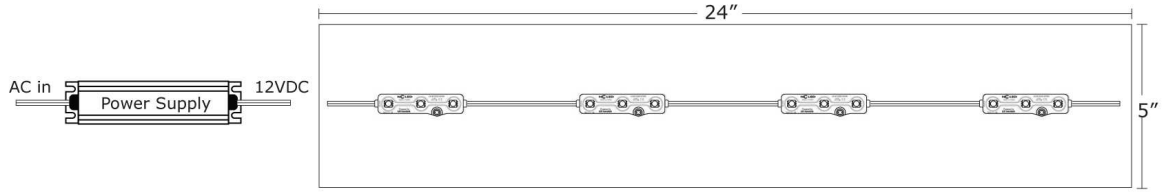

*No more than 50 modules per line and do NOT exceed the maximum handling power of power supply.