


Important: Please read all instructions prior to installation.

Parts Included

CT-RGB-T01 CT : Controller
CT-RGB-T01 REM : Remote Control

*Sold separately

Physical

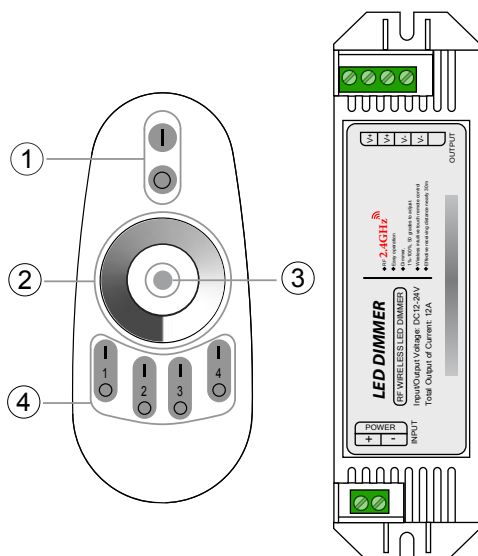

Wireless Remote

1. Master On(-)/Off(O)

A master On(-)/Off(O) control for all zone-linked dimmable LED light. Also activates the "Master" function, which allows the remote to control the light of all zones. If a zone is currently active, pressing the master On(-) button restores the "Master" function to the remote.

2. Brightness Selection Ring

Directly selects or dims brightness along a circular grey scale.

3. Selection LED Indicator

Flashes once to indicate when a command has been selected.

4. Zone On(I)/Off(O) - Zones 1-4

Allows up to four "zones" (i.e. channels) of dimmable LED light to be separately linked and controlled by the remote. Pressing one of the Zone On(I) buttons activates that zone; commands will affect only lights in that zone. Once linked to a zone, lights remain linked until they are unlinked. Steadily depressing the Zone On(I) button restores the lights in that zone to white.

Linking Dimmer to Remote

The multi-zone RF remote can control up 4 individual dimmers independently.

Linking a dimmer to the remote

1. Switch off the main power supply to the light.
2. Restore power and within 3 seconds, choosing one of the "Zone On" (I) buttons, depress the button until the light begins flashing. It will flash white 3 times, indicating that the light is now linked to that numbered zone and can be controlled via the remote.

Activating a Zone


To activate a specific zone, depress the "Zone On" (I) button. The zone is now active and remote commands will only affect lights linked to that zone.

Unlinking a dimmer to the remote

1. Determine which zone the light is linked to. This can be done by testing the Zone On/Off controls for each zone on the remote.
2. Switch off the main power supply to the light.
3. Restore power and within 3 seconds, depress one of the "Zone Off" (O) button until the light flashes 3 times, indicating that the light has been unlinked.

Important: Please read all instructions prior to installation.

Linking light to Remote (continued)

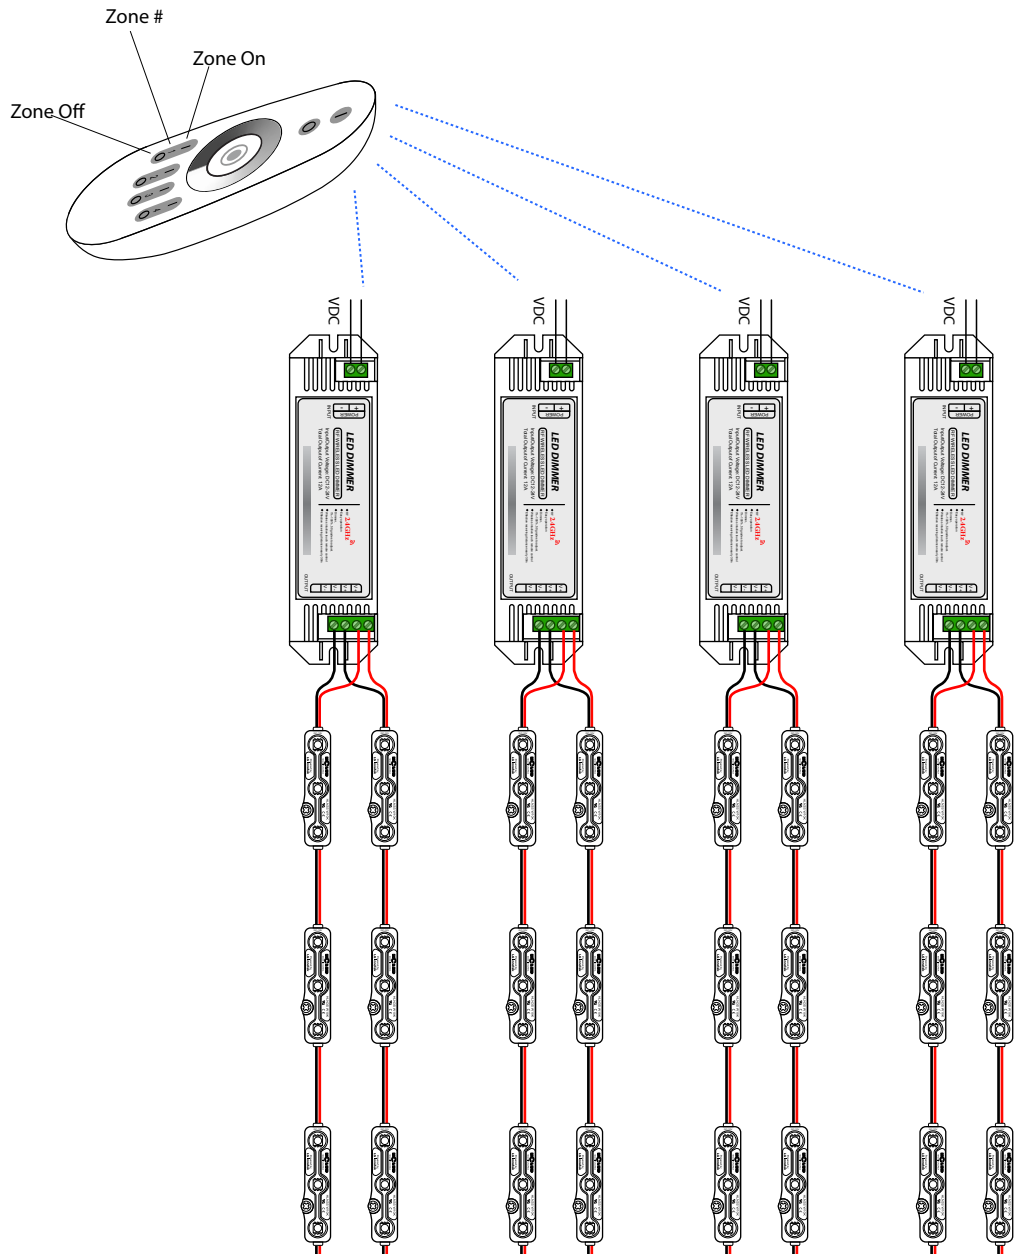

Technical Data

Remote

Size(mm)	120 x 52 x 20
Power	2 x AAA Battery
Material	ABS

Controller

Size(mm)	18 x 40 x 153
Working Voltage	DC12~24V
Number of Channel	2
Max Load per Channel	6A
Output Connection	Common Anode
Controlling Distance (m)	30
Number of Programs	9

Elite LED Supply, Inc

8720 Westpark Dr Ste B TX 77063

Tel:713-234-6579 Fax:832-886-5256 www.eliteledsupply.com

